


- · To prevent injury, be sure the power cord is not accessible to small children.
- · Read manual carefully for proper use and optimal operation.

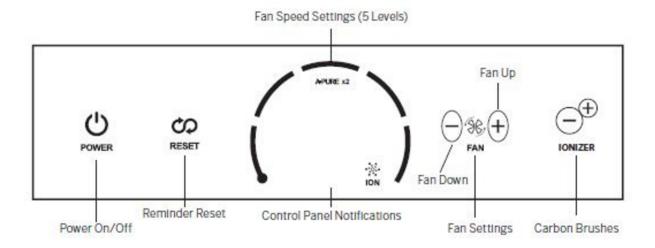

#### OPERATION

- Take your Vollara® unit out of the shipping carton and remove all protective materials.
- Place your unit in an appropriate location which could be four feet or higher from the ground. Never set it on the floor, and place in a location away from the HVAC return duct. The rear of the unit requires one inch or more of open area to allow unrestricted airflow.
- Insert the Power Supply Plug into the power receptacle on the rear of the unit. Plug the appropriate cord into the Power Supply and into a working electrical outlet.
- The Vollara Air & Surface Pro XL can be turned on or off, and adjusted, using the control panel on the front of the unit.
- Push the Power button once to turn the unit on.

NOTE: Once the unit is powered on, both the (2) ActivePure
Cells and the carbon brushes (ionizer) are
functioning and will be illuminated on the control panel.

Push the Fan + button four times to reach the highest fan speed (5th level) and highest level of performance.

NOTE: For best results, run your Vollara Air & Surface Pro XL 24 hours a day, 7 days a week, giving you the benefits of ActivePure day and night.

## **Control Panel Settings**

POWER (STAND BY)
Turns the unit ON and OFF.

### RESET (REMINDER RESET)

Clears the maintenance reminders after performing routine maintenance.

⊖ \* FAN (FAN SPEED SETTINGS)
5 levels of fan speed; press - to adjust the fan speed down and + to adjust the fan speed up.

OP IONIZER (CARBON BRUSHES)
Press to turn carbon brushes ON and OFF.

#### Control Panel Notifications

# ION

Ion illuminates to indicate carbon brushes are operating.

#### A-PURE x2

A-PURE x2 illuminates to indicate the (2) ActivePure Cells are functioning normally.

For maintenance and cleaning instructions, refer to the owner's manual.